 


OPERATING INSTRUCTIONS



 
Warning

Please tear off all the hyaline protect film around the big Decoration Cover first!



Warning

The heater must be properly installed before it is used. This unit is equipped with one On/Off switch.

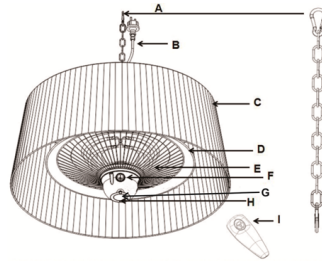

- | | |
|---------------------|------------------|
| A. Chain with Hook | B. Power Cable |
| C. Decorative Shade | D. Heater Head |
| E. Heating Lamp | F. On/Off Switch |
| G. LED | H. Touch Switch |
| I. Remote Control | |

Remote control



- Press the On/Off switch to activate the heater
- To operate the heater on low power (800W), press on the left side button of the remote control
- To operate the heater on medial (1000W), press on the right side button of the remote control
- Press on both the left and right side button of the remote control for maximum power (1800W)
- To operate the LED light, press the top button of the remote control
- The type of battery : 2 x AAA, 1.5V (Not include)

Operation of Touch Switch

- Press the On/Off switch to activate the heater
- Touch the touch switch once to operate the heater on 800W power.
- Touch the touch switch twice to operate the heater on 1800W power.
- Touch the touch switch third times to activate the LED light without heat.
- Touch the touch switch four times to operate the LED light and to operate the heater on 1800W power.
- Touch the touch switch five times to shut off the light and heat.

Care and maintenance

- Unplug the unit and let it cool completely.
- To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth.
 - DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
 - Although this heater is outdoor approved, DO NOT immerse the heater in water for your safety.
 - Wait until the unit is completely dry before use.



WEEE



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information please contact the local authority or your retailer where you purchased the product.

Storage

If the heater will not be used for a long period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

Trouble shooting

If the heater will not operate, please check the following before seeking repair of service: Check if the power cord is plugged into an electrical outlet, if not plug in. Check if electricity to the main fuse is working. Make certain the power switches are turned on. If not, choose a setting.

 
NOVA
LIFE

INSTRUCTIONS MANUAL

for TERRASSEVARMER

Double heating pendant lamp

Art Nr. 78004-060-71,78007-060-53,11000000095

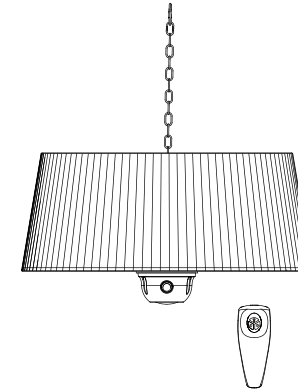

Technical specification

- Power supply 220-240V
~ 50-60Hz
- Wattage 1800W
- Insulation class I

www.lampehuset.no

Unpack the halogen heater making sure that all the items are present and that there are no components left in the box and that the heater head is free from any packing material.

Using the detailed drawing follow the steps to assemble your halogen heater.

Do not connect the halogen heater to the electrical supply until all the assembly is complete.

Do not connect the halogen heater to the electrical supply if any of the components or the power cord is damaged in any way.

Using the detailed drawing follow the steps to assemble your halogen heater.

If in doubt contact your supplier.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Warning:

This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

Caution:

Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Important instructions:

When using this electric unit, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Mount the heater outside or in a large open area and well away from any obstructions such as branches or where the heater is near any objects that can be affected by heat, such as furniture, curtains or other inflammable objects (minimum distance 1 meter).
2. Do not position immediately above or below an electrical socket.
3. The unit must be placed with the clearance of 180cm to the floor and 50cm to the ceiling.
4. When the power supply cord is damaged, it must be replaced by authorized agent or other professional people to avoid danger.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
8. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater.
9. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
10. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
11. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with the appliance
12. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been drooped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
13. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
14. DO NOT touch the control panel or plug with a wet hand.
15. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
16. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
17. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.

18. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.

19. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be 2.5mm² minimum size.

20. To avoid fire or shock hazard, plug the unit directly into a 220-240 Vac and 15A electrical socket outlet.

21. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on plug, DO NOT unplug by pulling on the cord.

22. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.

23. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

The use of attachments not recommended or sold by unauthorized dealers may cause hazards.

24. Always use on a dry, level surface. Use on ceiling only.

25. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.

26. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.

27. Connect to properly grounded outlets only.

28. Heater is not located immediately below a socket-outlet.

29. WARNING: This heater is not equipped with a device to control the room temperature.

Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

30. The heater must not be located in front of a socket outlet.

Installation Instructions

- Heater must be installed by a qualified electrician.
- Place the heater on a firm, level ceiling surface; level ceiling surface; installation of the heater on a strong rigid support (such as strong wooden beams or metal rails etc).
- The Hook on the ceiling hanging the Patio Heater must be able to take a weight 3 or 4 times that of the Patio Heater itself.
- Place the Hook A around the Ceiling Hook and clip on any Ring of the Chain to adjust the height of the Patio Heater to the Floor.
- The distance between the bottom of the Patio Heater to the Floor must be over 1.8M.
- Plug the Patio Heater into a grounded 220-240V 50Hz 13A power outlet.
- Only operate the heater when it is in the upright position.

Minimum Required Distances

- 25cm from the side wall
- 50cm from the ceiling
- Installation height above 180cm

