


Package contents (parts are not to scale):

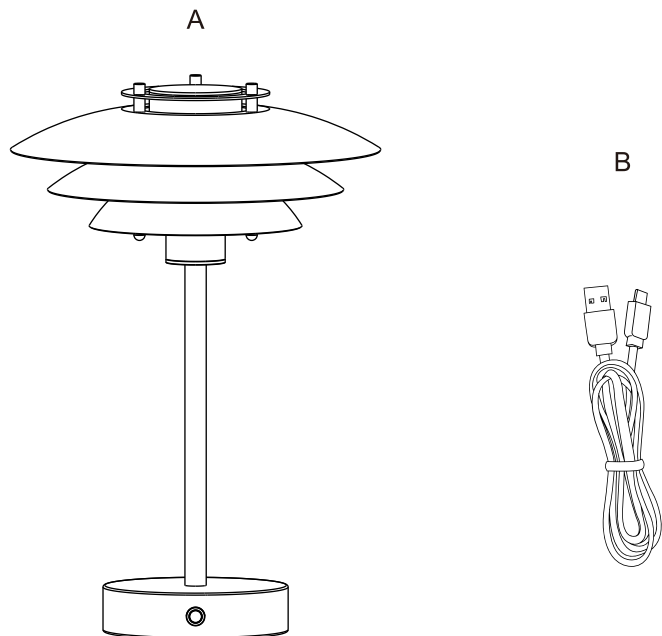

Part	Description	Quantity
A	Light fixture	1
B	Type-C cable	1


Care and Cleaning

EXTERIOR MAINTENANCE

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
2. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

INTERIOR TABLE LAMP

Art Nr. 21042-020-70,21042-020-81
21042-020-43,21042-020-44

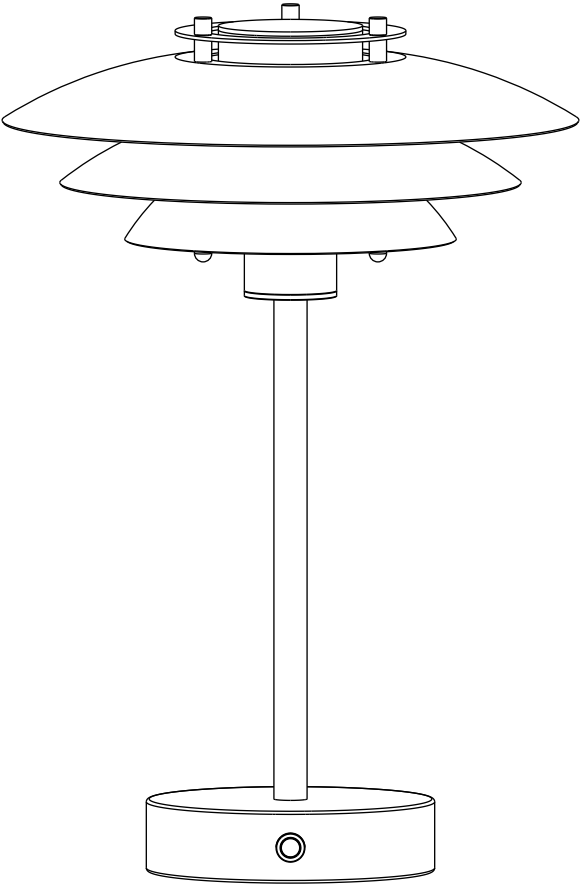

Pre-Installation

PLANNING THE INSTALLATION

Read all instructions before assembly and installation. Before starting installation of the fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

TOOLS REQUIRED



Knife

Product detail information:

Input: DC 5V 1A

Switch: Touch ON/OFF

Max watt:LED 1.8W

Lumen:200Lumen

Kelvin:3000K

Battery type: 2400mAh

Charging time: 4 hours

Running time: 12 hours

Safety: Class III

Guarantee: 1 year

(with 600times recharging, it means after 600times it could not be "100% full filled" but still could be recharged)

Switch instruction:

1.Please use the bottom charging port to charge before use. The indicator is red when charging.

Indicator light will be off when full charged.

2. Touch dim (short touch NO - 100% - 50% - 20% - OFF),long touch for stepless dimming

Installation

