


**Package contents (parts are not to scale):**

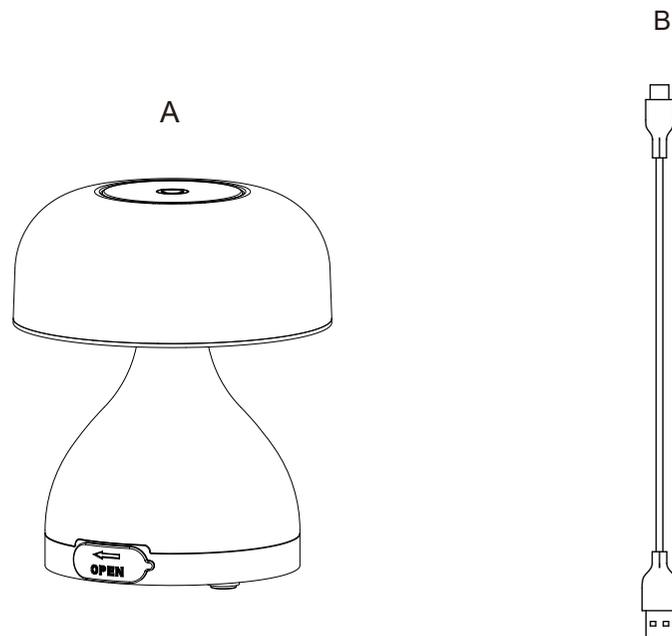

Part	Description	Quantity
A	Fixture body	1
B	Type-C cable	1


**Care and Cleaning**

**EXTERIOR MAINTENANCE**

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
2. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

**INTERIOR BORD LAMP**

Art Nr. 21046-012-70 & 21046-012-44 & 21046-012-43 & 21046-012-49

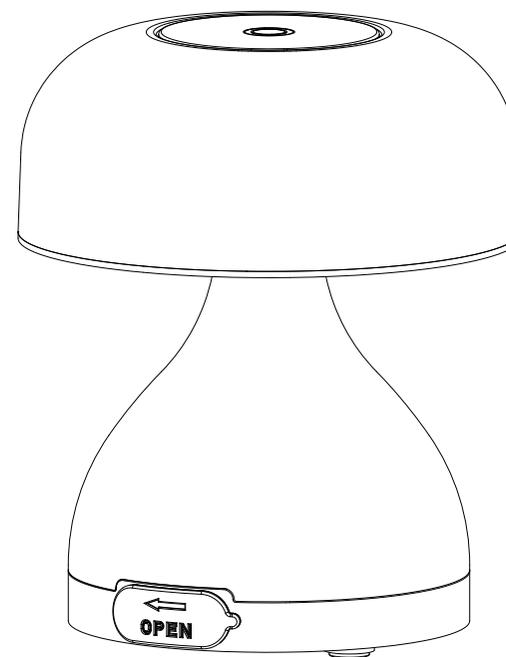

## Pre-Installation

### PLANNING THE INSTALLATION

Read all instructions before assembly and installation. Before starting installation of the fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

### TOOLS REQUIRED



Knife

## Product detail information:

Voltage :DC3.7V

Switch: Touch ON/OFF

Colour temperature:3000K

Luminaire connected wattage : 1.6W,Luminaire luminous flux:260lm

Battery type: 3000mAh 18650 Li-ion battery

TYPE C charge time: 4~5hrs discharge time : 8~9hrs(50% light intensity)

Recharge: input DC 5V 1A(exclude adaptor)

With Touch dim On-100%-50%-20%-Off, long touch for stepless dimming 10%-100%

Safety: Class III

LED lifetime: 30000 hours

Battery life guarantee 1 years


(with 600times recharging, it means after 600times it could not be "100% full filled" but still could be recharged)

## Switch instruction:


1. Please use the bottom TYPE C charging port to charge before use, When charging the indicator is red. When charging is completed the indicator is green.
2. Touch the on/off button on the side of the lamp base to adjust the brightness from 100% to 50% and 20% by each touching.
3. To adjust the brightness touch the on/off button on the side of the lamp base.  
Long press on the on/off button will adjust the brightness from high to low. Release wanted brightness is reached. To increase the brightness again you need to long press the on/off button again. Press once to exit the brightness program.

## Recharging for battery


Step 1.

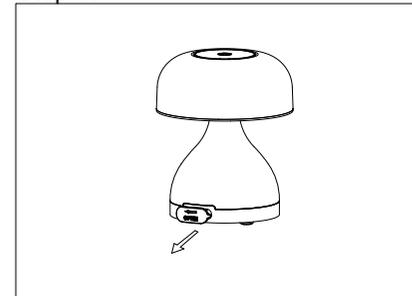


Step 2.

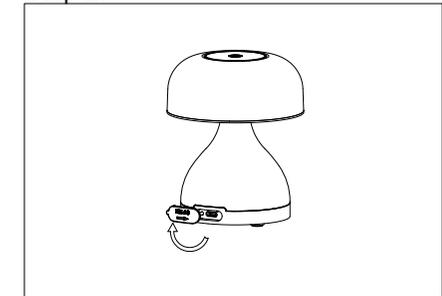

Step 3.

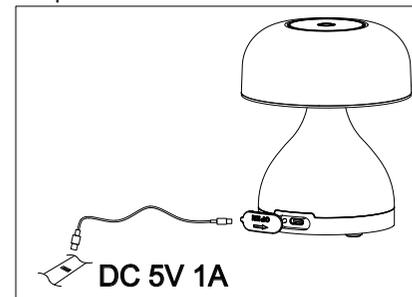

Step 4.

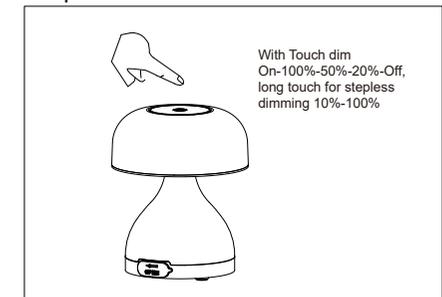

## Operation

- Turn on power at the circuit breaker or fuse box.
- Turn the light switch on to activate the fixture.