
Package contents (parts are not to scale):

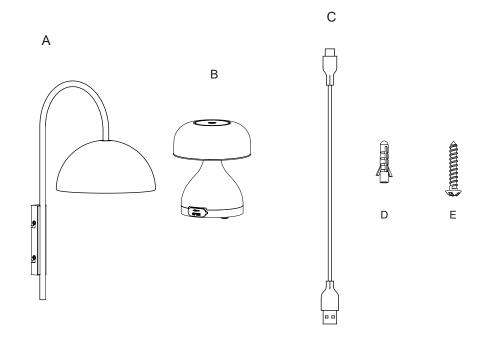

Part	Description	Quantity
Α	Fixture body	1
В	Myla oppladbar vegg lampe	1
С	Type-C cable	1
D	Wall expansion particle	2
E	Self-Tapping screw	2

Care and Cleaning

EXTERIOR MAINTENANCE

- To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
- 2. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.




INSTRUCTIONS MANUAL

for MYLA

INTERIOR WALL LAMP

Art Nr. 48006-045-70 & 48006-045-44

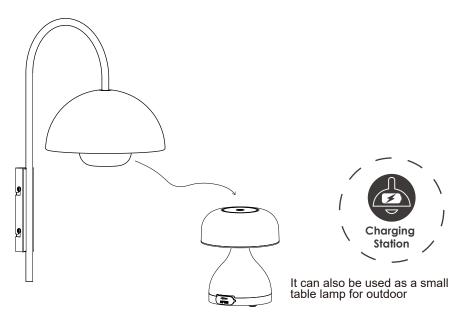

Product detail information:

Voltage :DC3.7V

Switch: Touch ON/OFF Colour temperature:3000K

Luminaire connected wattage: 1.6W,Luminaire luminous flux:260lm

Battery type: 3000mAh 18650 Li-ion battery

TYPE C charge time: 4~5hrs discharge time: 8~9hrs(50% light intensity)

Recharge: input DC 5V 1A(exclude adaptor)

With Touch dim On-100%-50%-20%-Off, long touch for stepless dimming 10%-100%

Safety: Class III

LED lifetime: 30000 hours Battery life guarantee 1 years

(with 600times recharging, it means after 600times it could not be "100% full filled" but still could be recharged)

www.lampehuset.no

Switch instruction:


- 1.Please use the bottom TYPE C charging port to charge before use, When charging the indicator is red.When charging is completed the indicator is green.
- 2. Touch the on/off button on the side of the lamp base to adjust the brightness from 100% to 50% and 20% by each touching.
- 3. To adjust the brightness touch the on/off button on the side of the lamp base.
 Long press on the on/off button wil adjust the brightness from high to low. Release wanted brightness is reached. To increase the brightness again you need to long press the on/off button again. Press once to exit the brightness program.

Pre-Installation


PLANNING THE INSTALLATION

Read all instructions before assembly and installation. Before starting installation of the fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

TOOLS REQUIRED

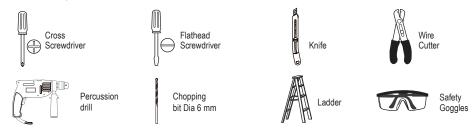



Installation

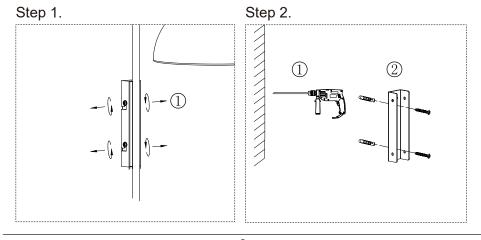

Installation (continued)

Step 3.

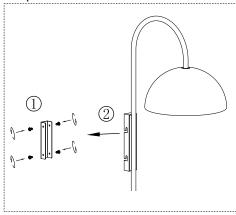


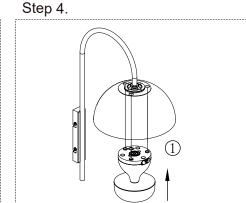

Myla oppladbar vegg lampe

Recharging for battery

Step 1.

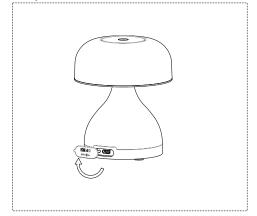



Step 2.

Operation

- Turn on power at the circuit breaker or fuse box.
- ☐ Turn the light switch on to activate the fixture.