
### Package contents (parts are not to scale):

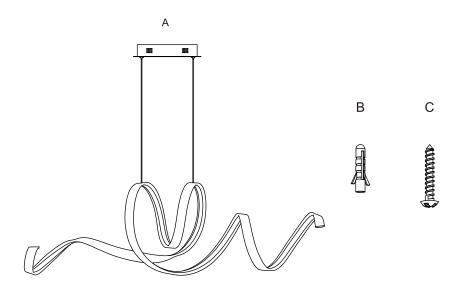

Part	Description	Quantity
Α	Fixture body with wire	1
В	Wall expansion particle	2
С	Self-Tapping screw	2

# **Light source**

Max. LED 59W 7800Lumen 3000K (Dimmable)

(Lamp gurantee: 3 years)

# **Care and Cleaning**

#### **EXTERIOR MAINTENANCE**

- 1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
- 2. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.




# **INSTRUCTIONS MANUAL**

for TWISTERS LONG

# INTERIOR PENDANT

Art Nr. 54876-125-71

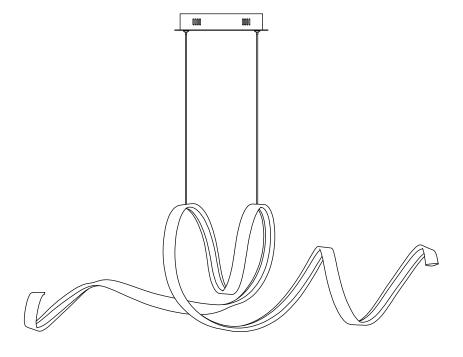


www.lampehuset.no

### **Pre-Installation**

#### PLANNING THE INSTALLATION


Read all instructions before assembly and installation. Before starting installation of the fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

#### **TOOLS REQUIRED**

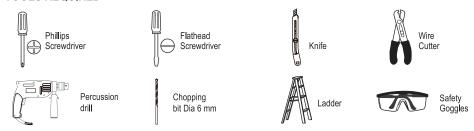


### **Installation** (Make sure to turn off the main power)


## Step 1.

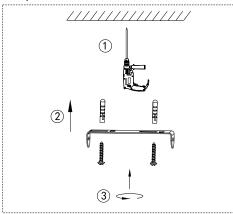


Step 2.

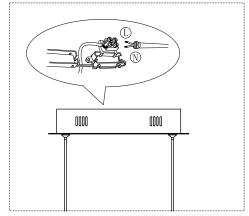


Step 3.

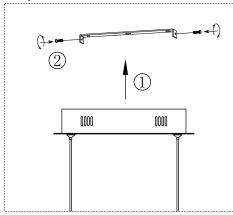

Step 4.

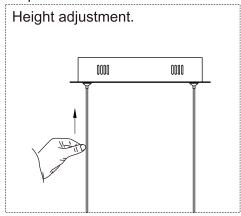

### Installation (continued)

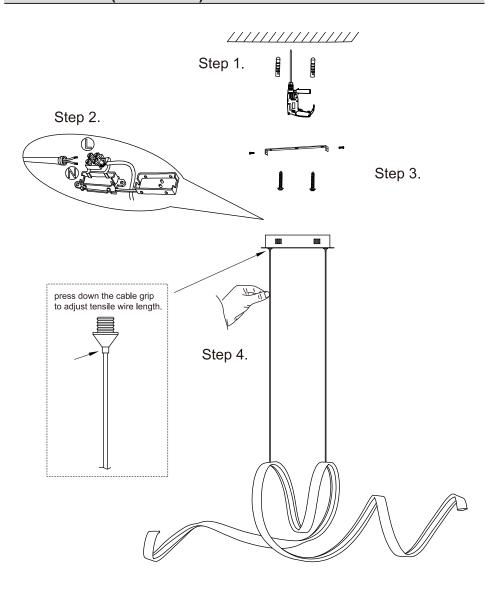

# **Operation**

- ☐ Turn on power at the circuit breaker or fuse box.
- $\ \square$  Turn the light switch on to activate the fixture.