


Package contents (parts are not to scale):

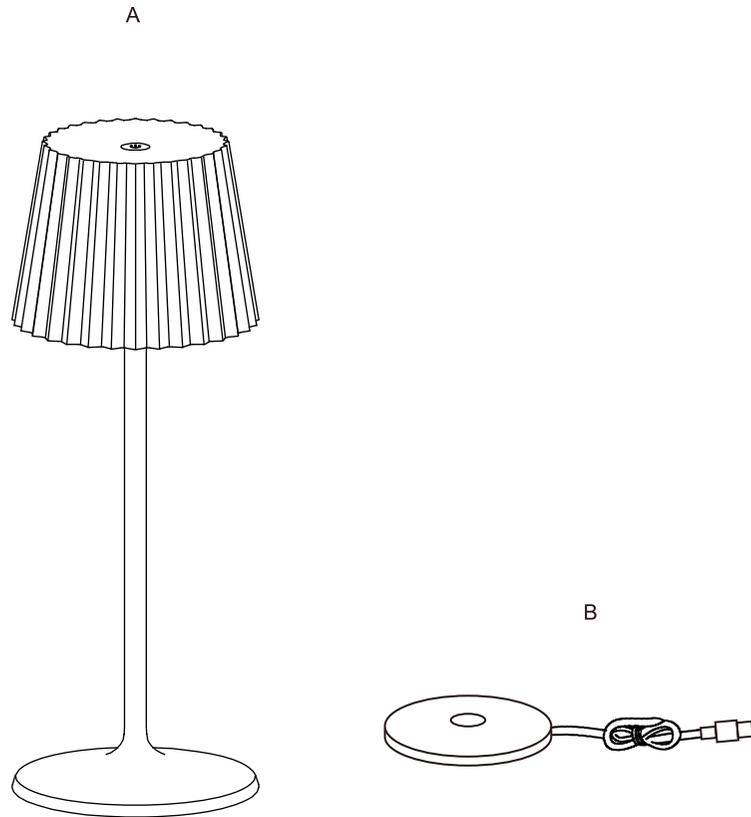

Part	Description	Quantity
A	Fixture body	1
B	Bottom charging	1


Care and Cleaning

EXTERIOR MAINTENANCE

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
2. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

TABLE LAMP

Art Nr. 76148-038-70(IP65)

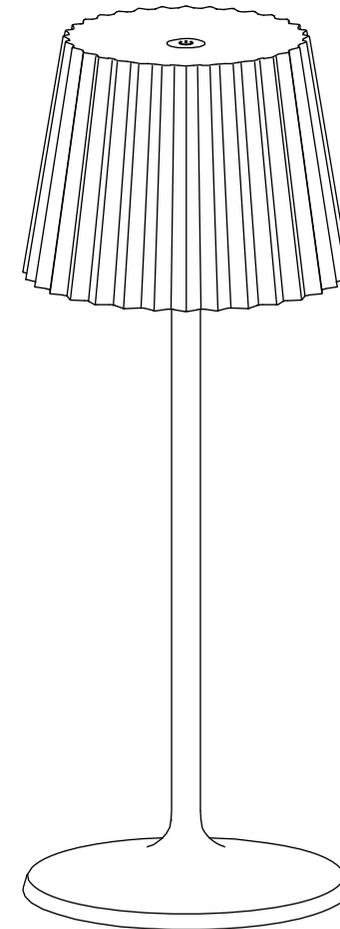

Pre-Installation

PLANNING THE INSTALLATION

Read all instructions before assembly and installation. Before starting installation of the fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

TOOLS REQUIRED



Knife

Product detail information:

Switch: Touch ON/OFF

Max Watt: LED 1.6W

Kelvin: 3000K

Lumen: 250Lumen

Touch switch, on/off

Outdoor IP65

Charging time: 3 hours

Running time: 6-70 hours

Lamp gurantee: 3 years(battery recharging 500 times)

Battery type: 1×2600mAh Li-ion battery

Adapter(optional): CLASS II; Input AC100-240V ; Output DC 5V 1A

(with 500times recharging, it means after 500times it could not be "100% full filled" but still could be recharged)

Switch instruction:

1.Please use the bottom charging port to charge the lamp before use. The charging indicator is flickering during recharging, and stable green light when fully charged.

2.Touch on/off:

short touch for ON-OFF

long touch for stepless dimming, with memory.

