 










## Operation

Connect the power cable to a 16 amp supply that is located in a safe, dry area.

Control panel:



- Touch "  " for the first time, and the head of the product will turn on the low gear
  - Touch "  " for the second time, and the head of the product will open in the middle position
  - Touch "  " for the third time, and the head of the product opens to the high gear
  - Touch "  " for the fourth time, and the product head closes.
  - Touch "  " for the first time, and the main body of the product turns on heating.
  - Touch "  " for the second time, the main body of the product turns off heating.
- Under any working conditions of the product:
- Touch "  " for the first time, and the product will be timed for 2 hours.
  - Touch "  " for the second time, the product will turn off timing.

## Maintenance

- Unplug the unit and let it cool completely.
- To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth.
- DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- Although this heater is outdoor approved, DO NOT immerse the heater in water for your safety.
- Wait until the unit is completely dry before use.

## Storage

If the heater will not be used for a long period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

## Trouble shooting

If the heater will not operate, please check the following before seeking repair of service:

 
- Check if the power cord is plugged into an electrical outlet, if not plug in.
- Check if electricity to the main fuse is working.
- Make certain the power switches are turned on. If not, choose a setting.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information please contact the local authority or your retailer where you purchased the product.

## 3+1 heating floor lamp

Art Nr. 78008-205-71

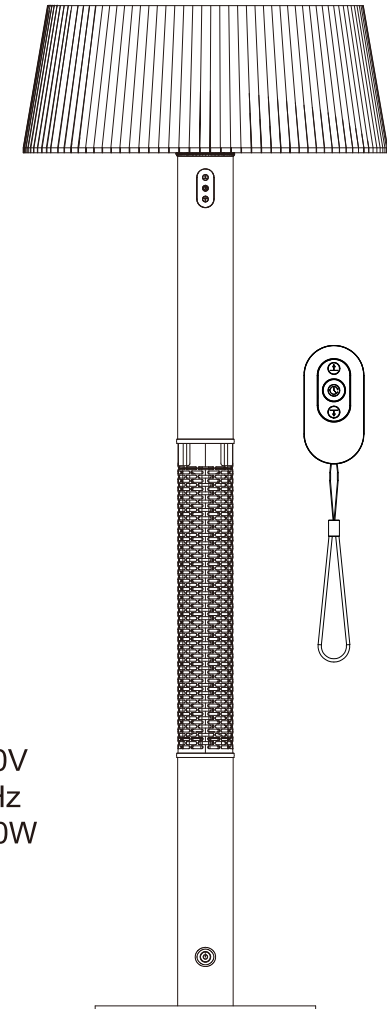

### Technical specification

- Power supply 220-240V  
~ 50-60Hz
- Wattage 2000W+1000W
- Insulation class I

Please read these instructions carefully before using your new heater

## Important instructions

Only use the halogen heater on a firm solid horizontal area where all the feet on the base are in contact with the floor.

(Should the heater be tilted or fall over the auto cut off switch will activate)

- 1.This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2.Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- 3.This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- 4.Children of less than 3 years should be kept away unless continuously supervised.
- 5.Children shall not play with the appliance
- 6.Cleaning and user maintenance shall not be made by children without supervision
- 7.Never fix or place heater near flammable or combustible materials.
- 8.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 9.The heater must not be located immediately below a socket-outlet.
- 10.Site the heater outside or in a large open area and well away from any obstructions such as branches or where the heater is near any objects that can be effected by heat, such as furniture, curtains or other inflammable objects (minimum distance 1 meter).
- 11.Children should be supervised to ensure that they do not play with the appliance.
- 12.Do not push any items through, obstruct or cover the grill of the heater.
- 13.Do not move when connected to an electrical supply and always wait for the patio heater to cool down before storing away.
- 14.Do not touch the heater when in use.
- 15.The indication of the different positions of switches shall be visible from a distance of 1m.
- 16.The unit must be placed with the clearance of 100cm to the wall.
- 17.Don't wrap the power supply cord on the unit.
- 18.The unit must be handled with care, and avoid vibration or hitting.
- 19.The unit is for household use only. It is not safe to use on a building site, greenhouse, barn or stable where there's flammable dust.
- 20.The head of the unit is at high temperature during operation. Unplug the unit and wait till it cools before cleaning.
- 21.Don't use this unit in place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
- 22.Don't use this unit as a cloth drier or towel drier.
- 23.Don't use this unit in place of animal propagating and raising.
- 24.Don't immerse this unit into water for cleaning.
- 25.The unit should be plugged in a socket, which is easily visible and reachable.
- 26.One dark point may exist on the surface of the heating elements during the first few minutes after it is turned on. This is normal, and will not affect the performance of the unit.
- 27.Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exist if the heater is covered or positioned incorrectly.
- 28.Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- 29.Do not use this heater if it has been dropped.
- 30.Do not use if there are visible signs of damage to the heater.
- 31.Use this heater on a horizontal and stable surface
- 32.Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- 33.Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool
- 34.Do not use this heater if it has been dropped;
35. Do not use if there are visible signs of damage to the heater;
36. use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
37. To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

## Assembling

Heater ZHQ2010-RM-ADJ is built with the best quality components in accordance to the prevailing legal regulations and certified for safety in use. For best results from the appliance please ensure that the installation is done by a qualified electrician in accordance with the following instructions and taking full account of current regulations. When using the heater, please carefully follow the instructions and recommendations below.

- Minimum required distances:
  - a)50cm from the side wall
  - b)50cm from the ceiling
  - c)Installation height above 180cm



 
- Never fix or place heater near flammable or combustible materials.
- Generally heaters must be placed at a safe distance (clear space) of at least 2.0m from combustible materials and glass walls. If installed in workshops or garages where inflammable or combustible paints are used, the heaters must be installed at a distance of at least 4.0m from the source of danger.

- If the heaters are placed in areas where spray painting of any description is taking place, they should not be used during the painting operations.
- Never use the heater in particularly dusty and explosive areas.


- It is important to ensure that the electricity supply is of adequate capacity for the electrical load required by the appliance being installed.
- These appliances must be earthed

## Warning


Please tear off all the hyaline protect film around the big Decoration Cover first!

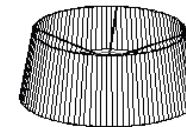

 Step 1: Base connected the bottom of the body with the screws 3-M6\*25mm.

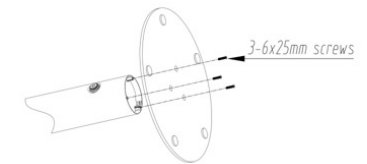

 Step 2: Align the head and the main body with the male and female sockets, and then lock them with M4\*8MM screws.

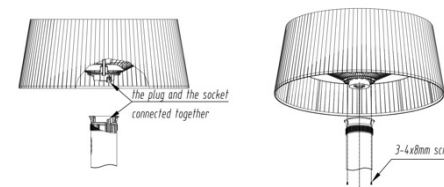

Step 3: Move the product to the use position and fix it with the chassis fixing plate.

