


Battery replacement:

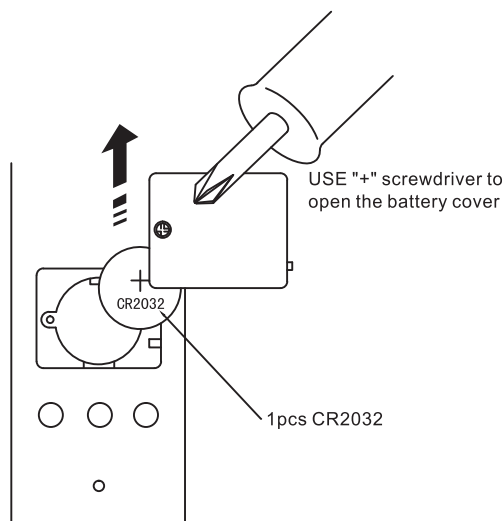

Light bulb

Max power consumption	≤5W		
Luminous flux	300Lm/360Lm	Working voltage	DC5V-1200mA
Color temperature	Cold light 6500K/360Lm Warm light 3000K/300Lm Cold light and Warm light 4000K	Max Power	5W


Care and Cleaning

EXTERIOR MAINTENANCE

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
2. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LED INTERIOR TABLE LAMP

Art Nr. 20193-000-53,20220-060-71

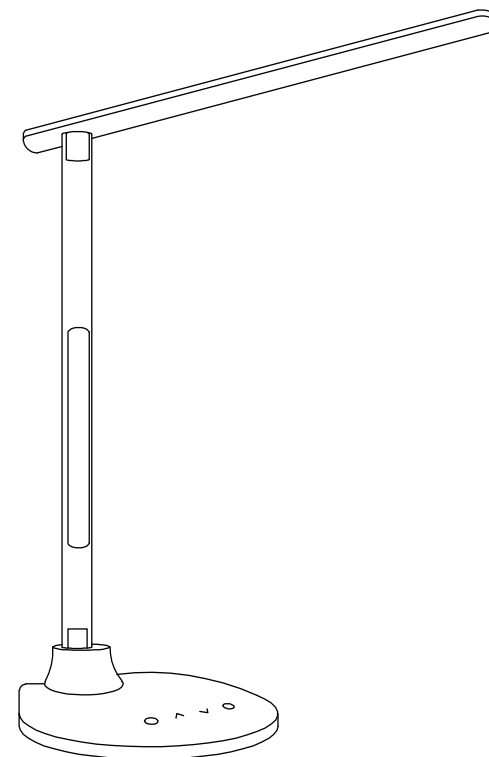

www.lampehuset.no

Main Function:

- Available 3 mode (Cold light - Warm light - Natural light), excellent color reality and eye-protection.
- Adopt high performance LED light and components, lighting more concentrate.
- High sensitivity touch panel, elegant control experience.
- 3 - Grade brightness strengths, applicable to different lighting requirements.
- Folding and biaxial rotary design, easy to get best lighting angle.
- Low energy consumption design, saving 80% than incandescent lamp.
- Does not contain the Tungsten, Mercury and other toxic metal, environmental friendly.
- No fragile glass parts, safe and ease.
- Digital tube display with Calendar and alarm clock.

Pre-Installation


PLANNING THE INSTALLATION

Read all instructions before assembly and installation. Before starting installation of the fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

TOOLS REQUIRED



User guide

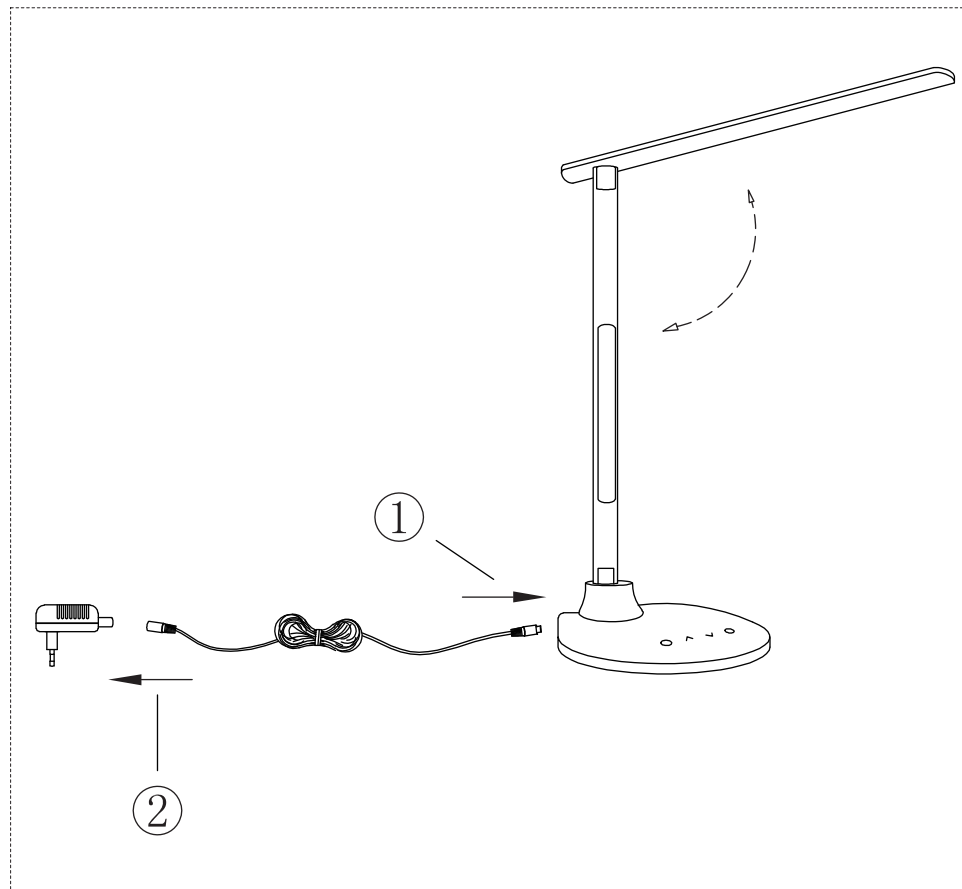

Light Operation instruction

■ Touch key instructions:



- Turn on/off the lamp: touch "ON/OFF"
- Brightness adjusting: touch "UP" or "DOWN"
- Lighting mode: Cold light - Warm light - Natural light, Switchable

Calendar Operation instruction



■ S (setting)

Press "S" for around 3 second, the "MONTH" will flicker, then click "∧" and "∨" to adjust "MONTH", after "MONTH" setting, click "S" key again to set the "DATE", "HOUR", "MINUTE".

After "MINUTE" setting, click "S" again, "24H" will flicker, then "∧" and "∨" to select "12" or "24H".

Then click "S" again to active alarm clock, and click "∧" and "∨" to set alarm time.

■ ∧ (up key)

In setting mode, click it to increase

■ ∨ (down key)

In setting mode, click it to decrease.

* In normal time mode, click it to turn on/off the alarm clock.

