
Package contents (parts are not to scale):

A

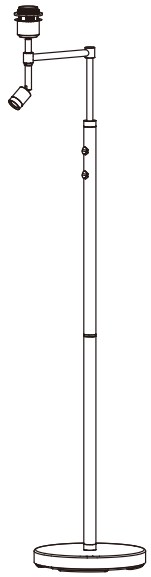

B



Part	Description	Quantity
A	The fixture	1
B	Wrench(17-19)	1

Light source

230V E27 1 x 40W Max (not include) + LED 2W 250lumen 3000K (no-dim)

(Lamp gurantee:3 years. LED lifetime:30000 hours)

Care and Cleaning

EXTERIOR MAINTENANCE

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
2. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.


NOVA LIFE

INSTRUCTIONS MANUAL

for Sander

INTERIOR FLOOR LAMP

Art Nr. 11000000539

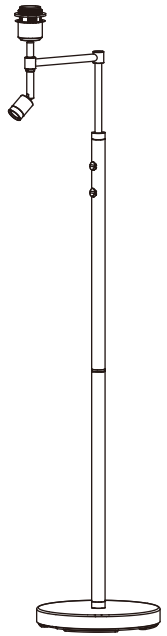

CAUTION:

NO:
Advarsel:
-Bruk kun pærer som anvist etiketten på lampen.
-Slå av lampen før bytting av pære og vent til pæren er avkjølt. Vis forsiktighet ved berøring av lampen når den er tent. Den kan være varm.

SE:
Varning:
-Använd endast glödlampor enligt anvisningar på lampans etikett.
-Stäng av lampan innan du byter glödlampa och vänta tills lampan har svalnat. Var särskilt försiktig vid beröring av lampan när den är tänd. Det kan vara varmt.

English:
Warning:
-Only use bulbs as directed on the label on the lamp.
-Turn off the lamp before replacing the bulb and wait until the bulb has cooled. Take special care to touch the lamp when the lamp is lit. It can be hot.

www.lampehuset.no

Pre-Installation

PLANNING THE INSTALLATION


Read all instructions before assembly and installation. Before starting installation of the fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.




Knife

Installation

Step 1.

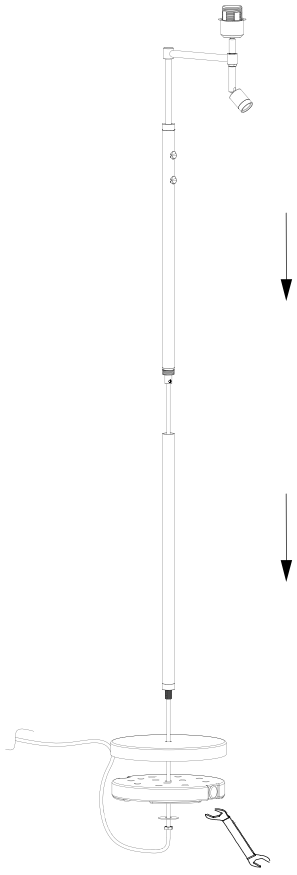


Step 2.

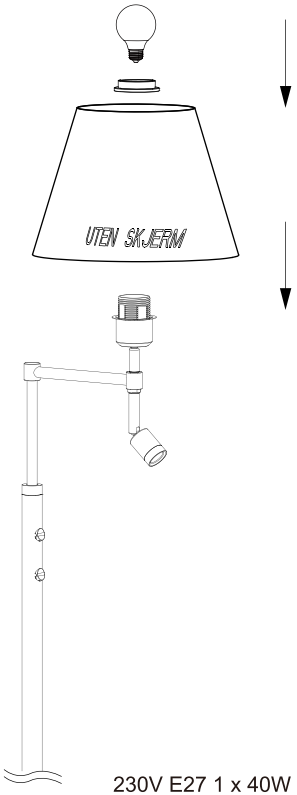

230V E27 1 x 40W Max
Recommend LED bulb

Installation (continued)

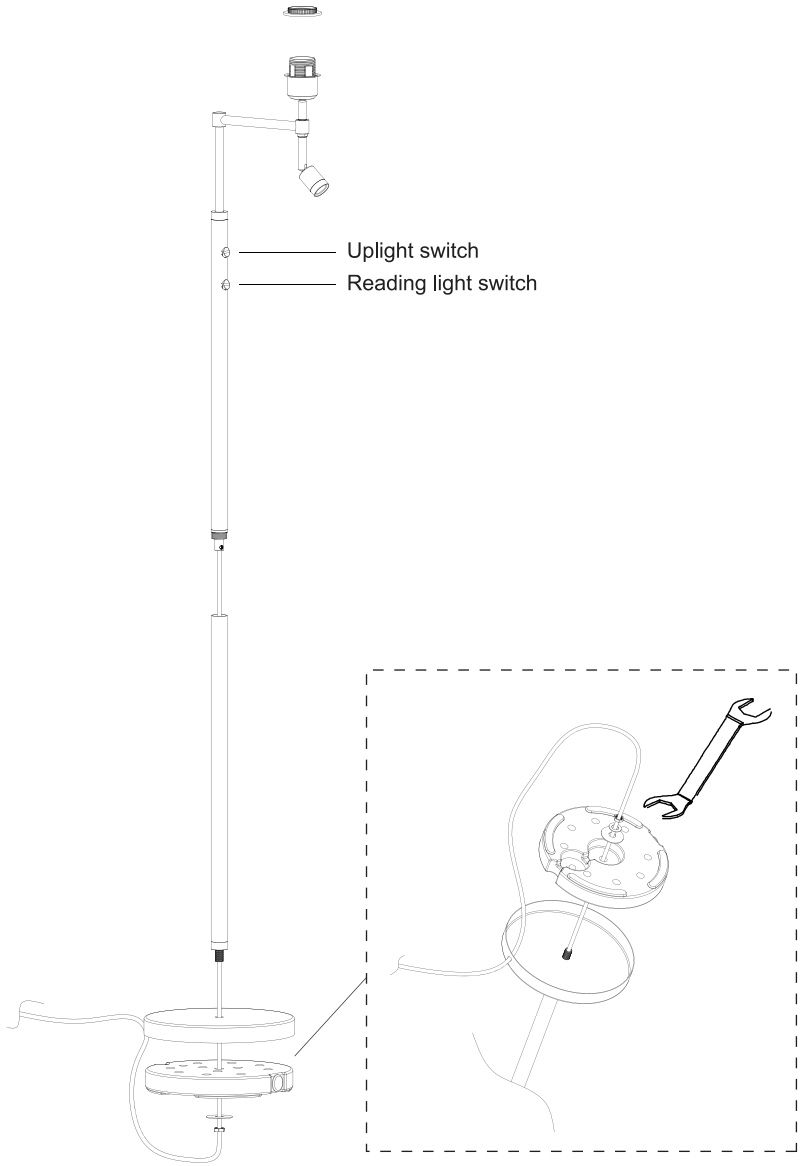

Operation

- ☐ Turn on power at the circuit breaker or fuse box.
- ☐ Turn the light switch on to activate the fixture.